




The animations do not replace the Installation Instruction. Please refer also to our Technical Documentation („BAL0811-0001“ und „MV0811-0018“)!

NOTICE!

SingleFlexLine 0811 Conductor Rail System

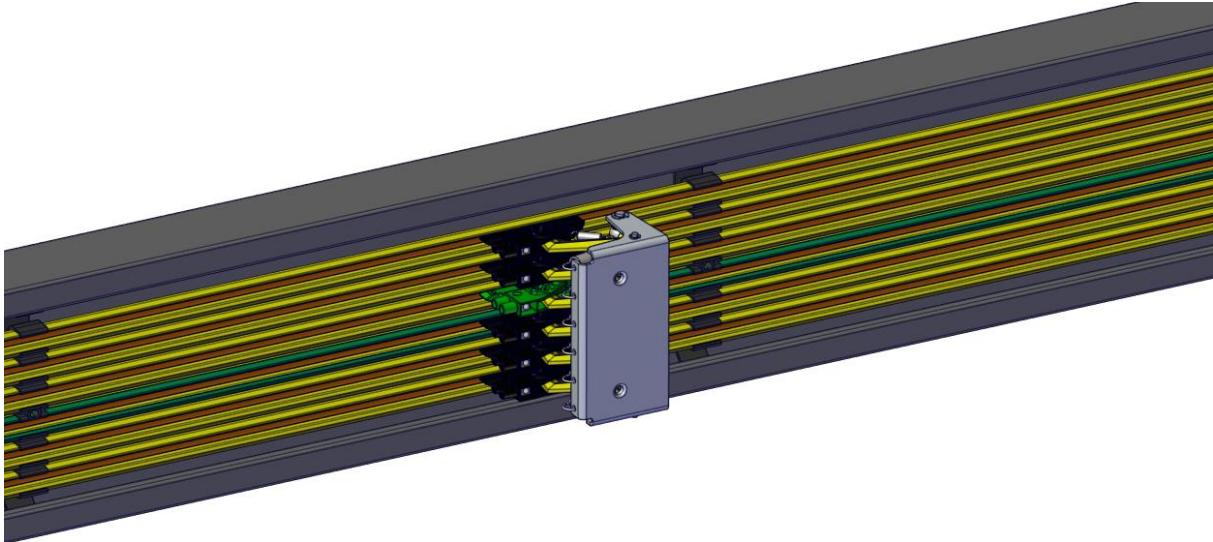

Please click the hyperlink or scan the code to start each animation:

System Overview SingleFlexLine 0811:

[MOV0811-0001](#)



Cutting Rail and Producing Notch for Connector:

[MOV0811-0002](#)



Bending Rail:

[MOV0811-0003](#)



Mounting Hanger Clamps
(clip-in, screwable and turnable):

[MOV0811-0004](#)



Mounting End Cap Bars:

[MOV0811-0005](#)



Connecting Rails and Mounting Line Feed:	MOV0811-0006	
Mounting Expansion Elements and Adjusting Air Gap:	MOV0811-0007	
Mounting Anchor Points with pins (081133):	MOV0811-0008	
Mounting Screwable Anchor Points (081131/081132):	MOV0811-0009	
Current Collector Tolerances:	MOV0811-0010	
Mounting the Air Gap Insulation Section:	MOV0811-0011	
Mounting Towing Bracket:	MOV0811-0012	
Mounting the Outrigger:	MV0811-0013	

Notes:

Conductix-Wampfler GmbH
Rheinstraße 27 + 33
79576 Weil am Rhein - Markt
Germany

Phone: +49 (0) 7621 662-0
Fax: +49 (0) 7621 662-144
info.de@conductix.com
www.conductix.com